



## Assembling the synth stand

1. Match and align the numbers on the pieces (you should do all these steps on a flat surface).

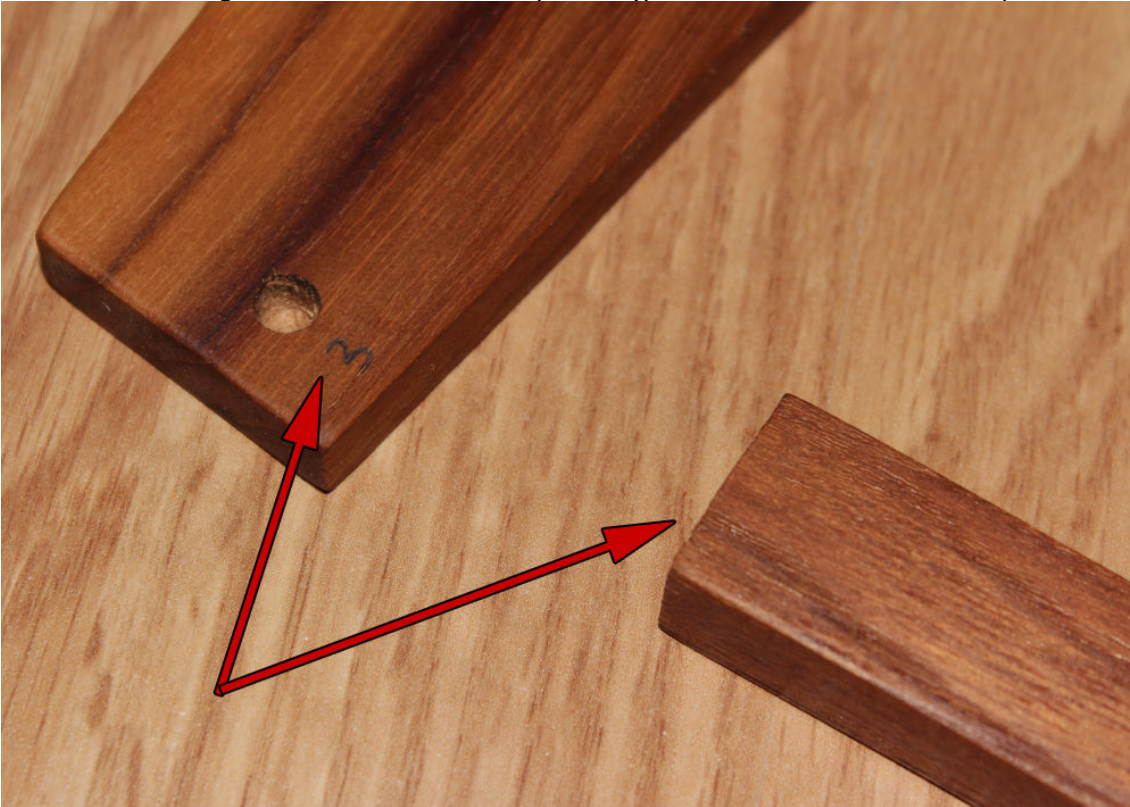

2. For the first end piece: cover one end (the less smooth end) of the wooden plugs with glue and insert them into the holes of the end pieces. Then cover the other end with glue. The glue can be normal wood glue, some universal glue or epoxy.

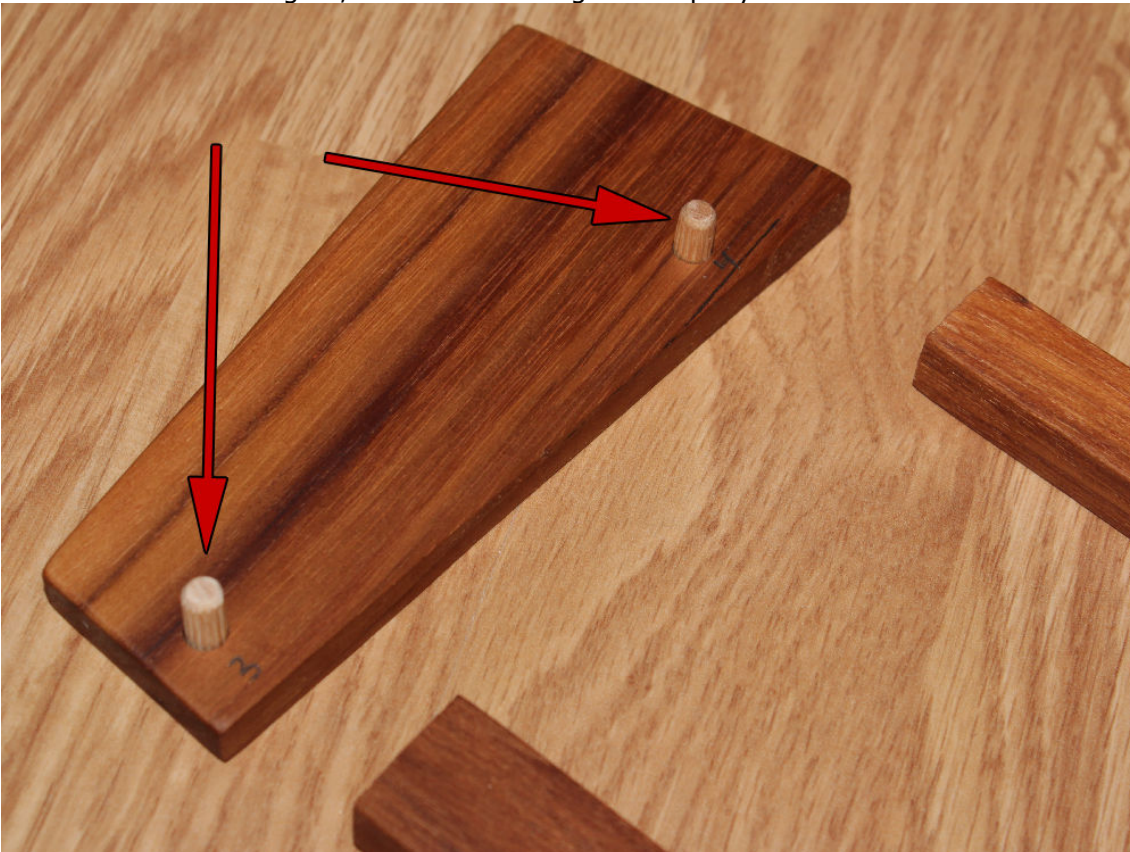

**3.** Attach the two bars to the end piece keeping the numbers aligned. Make sure that they are straight.



**4.** Repeat steps 2 and 3 for the other end piece.

**5.** Use the supplied elastic band to keep the pieces together. The elastic band should tighten at the middle positions of the bars. You can also press the end pieces together to make sure you have a good fit.



6. For the Boutique synth, the flap for the keyboard assembly needs to be in the position shown in the picture below.



7. Put the synth into the stand, you can again gently press the end pieces together and also check that the synth is resting in the stand without wobble. Leave the stand alone for a couple of hours for the glue to dry.

